


Quick Start Guide

WHAT'S IN THE BOX Quick Setup Screws and and Download 1 Plastic 1 set Anchors - 4pcs

Star Wrench

Default Login Information: admin | admin When logging into the camera for the first time, you must set up a new password. You can set the new password using the DW® IP Finder™ software or directly from the camera's browser menu.

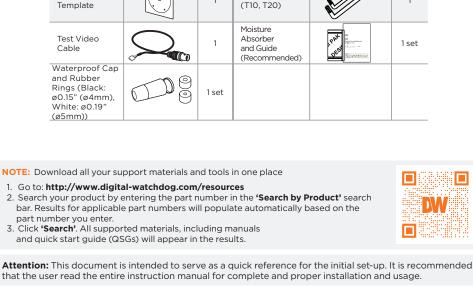

- SAFETY AND WARNING INFORMATION
- Read through this Installation Guide carefully before installing the product. Keep the Installation Guide for future reference. See the user manual for more information on the proper installation, use and care of the product. These instructions are intended to ensure that users can use the product correctly to avoid danger or property loss. Warnings: Serious injury or death may occur if any of the warnings are neglected.

 Cautions: Injury or equipment damage may occur if any of the cautions are neglected. WARNING

2.

9.

from tip-over.

Install the Desi-Pack (moisture absorber):

Remove the Desi-Pack from its shipping packaging.

In the use of the product, you must be strict compliance with the electrical safety regulations of the nation and region. When the product is mounted on a wall or ceiling, the device shall be firmly fixed.

Be sure to use only the standard adapter specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product.

Make sure the power supply voltage is correct before using the camera.

Make sure the power supply voltage is correct before using the camera. Incorrectly connecting the power supply or replacing the battery may cause an explosion, fire, electric shock, or damage to the product.

Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause excessive heat generation or fire.

Securely plug the power cord into the power source. An insecure connection may cause a fire.

When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury.

Do not install in a location subject to elevated temperature, low temperature, or high humidity. Doing so may cause fire or electric shock.

Do not place conductive objects (e.g. screwdrivers, coins, metal items, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects. 4. 5. 7. 8.

of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects. Do not install in humid, dusty, or sooty locations. Doing so may cause fire or electric shock. Do not install near any heat sources such as radiators, heat registers, or other products (including amplifiers) 10.

Do not install near any heat sources such as radiators, heat registers, or other products (including amplifiers) that produce heat.

Keep out of direct sunlight and heat radiation sources. It may cause a fire.

If any unusual smells or smoke come from the unit, stop using the product at once. Immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock. If this product does not operate normally, contact the nearest service center. Never disassemble or change this product in any way.

When cleaning the product, do not spray water directly onto parts of the product. Doing so may cause fire or electric shock. 15. electric shock

- CAUTION Use proper safety gear when installing and wiring the product.

 Do not drop objects on the product or apply strong shock to it. Keep away from a location subject to excessive vibration or magnetic interference.
- Do not use this product near water.

 The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.
- Avoid aiming the camera directly towards extremely bright objects such as the sun, as this may damage the image sensor. 5. The Main plug is used as a disconnect device and shall stay readily operable at any time. Remove the power adapter from the outlet when then there is lightning. Neglecting to do so may cause fire or damage to the product.
- uarnage to the product.
 Do not block any ventilation openings. Install following the manufacturer's instructions.
 A polarized or grounding-type plug is recommended for this product. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. If the provided plug does not fit into your outlet, consult an electrician for replacement.
 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
 If any laser equipment is used near the product make sure the surface of the concerning to the product that the life of the concerning to the product of the concerning to the product. 10. 11. If any laser equipment is used near the product, make sure the surface of the sensor is not exposed to the laser
- beam as that may damage the sensor module.

 If you want to move the already installed product, be sure to turn off the power and then move or reinstall it.

 Proper configuration of all passwords and other security settings is the responsibility of the installer and/or 13. end-user end-user.

 If cleaning is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device from dirt.

 Do not touch the camera's lens or sensor module with fingers. If cleaning is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device from dirt. 15.
- from dirt. Use only attachments/accessories specified by the manufacturer.

 Always use hardware (e.g. screws, anchors, bolts, locking nuts, etc.) compatible with the mounting surface and of sufficient length and construction to ensure a secure mount.

 Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the product.

 Unplug this product when a cart is used. Use caution when moving the cart/product combination to avoid injury from the part.
- 20. Refer all servicing to qualified service personnel. Servicing is needed when the product has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped. STEP 1 - PREPARING TO MOUNT THE CAMERA
 - Open the camera's control panel on the side of the camera. Remove the Desi-Pack used for shipping and place the new Desi-Pack in the location shown in the illustration below. Close the camera control panel tightly

Ø

Ø

0

NOTE: The camera will generate enough heat to dry moisture during operation. In cases where the camera can experience a

- 🕒 يَيْوْ (ب
- moisture issue, keep the moisture absorber in the camera. The moisture absorber has an approximately 6-month life cycle. WARNING: Install the moisture absorber when mounting the camera to prevent image performance issues and damage to the camera. 2. Using the mounting template sheet or the camera itself, mark and drill the necessary holes in the wall or ceiling. Resetting the camera: Use the tip of a paper clip or a pencil and press the reset button for five (5) seconds to initiate a camera-wide reset of all the settings, including network settings. STEP 2 - POWERING THE CAMERA Pass the wires through and make all necessary connections.

Use non-PoE Switch to connect data using and Ethernet cable and use a

power adapter to power the camera.

RECORDER

SEAL TAPE

Use a PoE Injector (required, Sold

power to the camera using a single

• F

WATERPROOF CAP INSTALLATION

rated sealer is recommended.

STEP 3 - INSTALLING THE CAMERA

b

sized for your network cable's diameter.

rubber ring.

NOTE:

separately) to connect data and

Ethernet cable.

Power information Power requirements

Power consumption DC12V: max 21.9W, 1.83A, PoE: max 9.2W, 200mA Maximum distance 328' (100m) RJ45

The waterproof cap set comes with two rubber rings. Use the rubber ring best


Cables with ø4.5mm to ø5.5mm thickness should use the black rubber ring. Cables over ø5.5mm in thickness should use the white

To ensure moisture seal, make sure the o-ring 📵 is in place between **and and and between between and between between between} between between between between between between between between between between} between between between between} between between between between between} between between} between between} between between between between} between} between between} between bet**

DC12V, PoE (IEEE 802.3af class 3). Adapter not Included.

CAMERA

OR

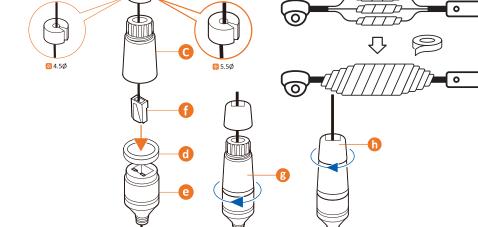

Secure the camera to the mounting surface using the included screws.

3. Remove the protective film from the lens cover. Softly wipe the lens cover with lens tissue or a microfiber cloth with ethanol to remove any dust or

Loosen the pan and tilt screw on the camera's bracket to adjust the camera's view and position.

Tilt 90°

Rotate 360°

Rubber Plua

🗿 Alarm In

Alarm Oı

Pan 360°

STEP 4 - CABLING

output, alarm and sensors to the camera.

smudges left from the installation process.

NOTE: Remove the rubber plug on the side of the camera's bracket and use the gap as a cable guide to prevent cables from getting caught between the camera and the mounting surface.

Use the diagram below to connect power, network and external devices such as audio input and

DIN (+)

DIN (-)

DOUT (-)


DOUT (+)

WHITE

YELLOW

SKY BLUE

GRAY + DOT

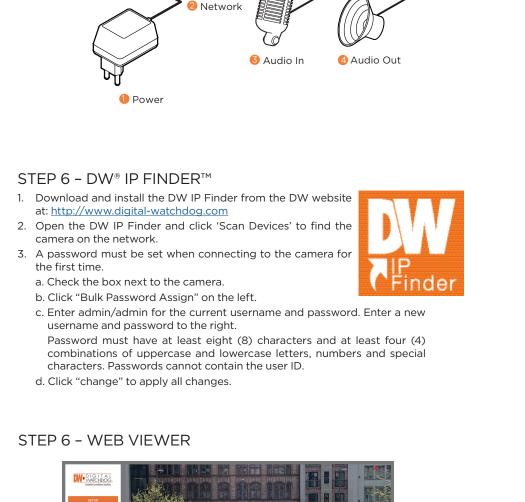

The GUI display may differ by camera models.

[Type the Password]

4. Enter the camera's username and password you set up in the DW IP Finder. If you did not set up a new username and password, a message will direct you to set up a new password for the camera to view the video. @ http://192.168.10.159/ - IP Camera - Internet Explorer

Press the 'View Camera Website'.

Find the camera using the DW IP Finder.

Double-click on the camera's view in the results table.

Password requirement : minimum 8 characters with at least three combinations of uppercase letters, lowercase letters, numbers and special characters. Acceptable special characters are; $\sim 1\$ ()_{-1}$

Password Retype Password Password Hint

To complete the DW Spectrum® CaaS™ server's set up and start recording, see the DW Spectrum® CaaS™ QSG for additional information.

STEP 7 - SET UP DW SPECTRUM® CAAS™

Change admin's password

NOTE: Please see the full product manual for web viewer setup, functions and camera settings options. This products is covered by one or more claims of the HEVC Patents listed at patentlist.accessadvance.com.

Tel: +1 (866) 446-3595 / (813) 888-9555 digital-watchdog.com Technical Support Hours: 9:00AM - 8:00PM EST, Monday through Friday Copyright © Digital Watchdog. All rights reserved. Specifications and pricing are subject to change without notice. Rev: 06/24

- DWC-XSBC08BiCx 4K bullet IP camera with Ai, x= storage size
- EGAPIX AI C Camera as a System with Next-generation Video Analytics